




Greasing Instruction Procedure

This unit will require the following procedure to ensure peak performance. Complete this procedure after the Covana has been completely installed.

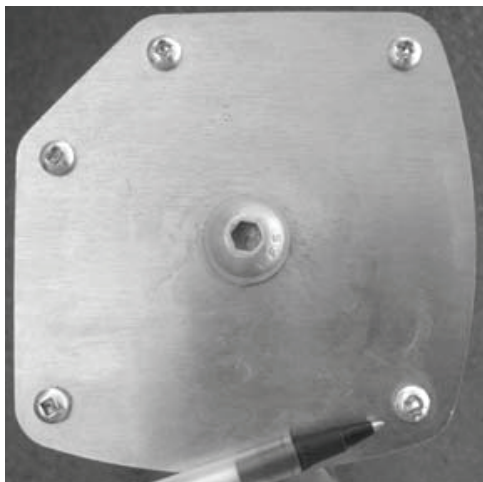

1. Ensure the cover is lowered completely and resting on the tub
 2. Remove the five screws from each of the posts
-



1. Extend the posts to their full height
 2. Using a spray lubricant - WD-40 or 3in1 oil - lubricate all the mechanical components that are visible, especially the vertical tubes. Do not use grease in cold climates.
 3. Retract the posts and carefully reinstall the screws by hand, screws could break if a power tool is used
 4. Also loosen the bolt in the center of the plate by one turn on all four posts, this will ensure that the jack is not being twisted and causing undue stress.
-

WWW.STERLINGCOVANA.COM