

COVANA

Oasis Uncrating

Required tools

- Scissors / retractable blade knife
- Robertson screwdriver
- Allen key (7/32")
- Imperial Wrench (3/8")
- hammer

Uncrating Procedure

- 1) Stand the Covana crate in the vertical position.



COVANA

- 2) With the retractable blade knife or scissors cut and remove the front cardboard.



- 3) Cut and remove the cable ties (4) holding the sleeve boxes -2 boxes per side



- 4) Remove the sleeve boxes (4) from the crate and place them in a safe place – 2 boxes per side



COVANA


- 5) Remove the small box, the foams and the seals package from the crate and place them in a safe place. Use a hammer to remove the front wood board by hitting it.



- 6) Use a Robertson screwdriver to remove the (2) screws holding the motor box.



- 7) Use a 3/8" Imperial wrench to remove the screw holding the bottom of the jack. – 1 screw per side.

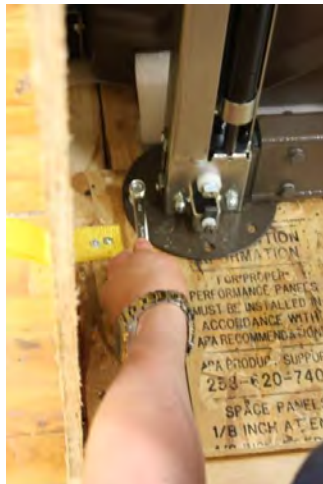

COVANA

8) Use a 7/32" Allen key to remove the bolt holding the bracket with the jack. – 1 screw per side



9) In a team of two (2), remove the motor from the crate (hold it by the jack) by lifting it up.



10) Use a Robertson screwdriver to remove the (2) screws on the aspenite sheet. – 1 sheet per side



COVANA

11) Remove the aspenite sheet.

12) Remove the extrusions and the jacks in the bottom of the crate.



13) In a team of two (2) or three (3) lower the crate on its back side. One (1) person on each side of the side panel. The third person holds the top crate while the crate is coming down.



14) With the retractable blade knife or scissors cut and remove the top cardboard.



COVANA


- 15) If your Covana contains roller shades. Remove the cardboard cylinder from the side panels holes and place them in a safe place. Use a hammer to remove the last wood board in the front of the crate.



- 16) Using a Robertson screwdriver, remove the 2 screws that attach the four (4) crate brackets to the cover.



- 17) Use a 3/8" Imperial wrench to unscrew the (4) roof brackets from the side panels. – 4 screws per side.

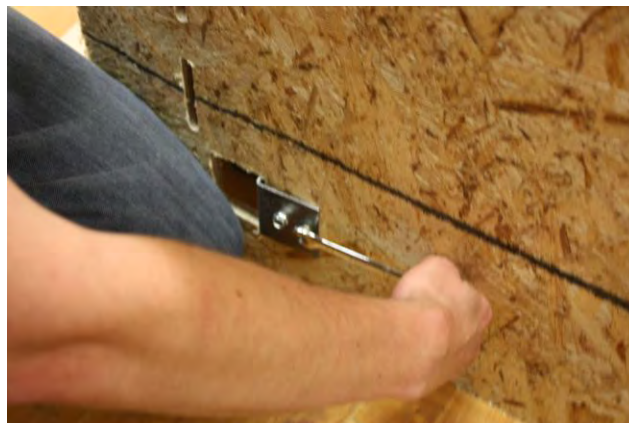

COVANA

18) Use a Robertson screwdriver to unscrew the screws (3) holding the side panels with the bottom of the crate.



19) Remove the side panels by hitting them outward with a hammer – 1 panel per side

20) In a team of two (2) or three (3) lift up the cover by holding it in the middle of the sides and place it on the spa.